

Order No.: V3799

 
 
Description: SHIMS CLACK VALVES&1191&1190FP

ONLY FOR USE ON CLACK CONTROL VALVES, CLACK 1191 IN OUT HEADS AND CLACK 1190FP IN OUT HEADS ON DOME HOLE TANKS WITH 2-1/2 -8 NPSM THREADS

HYDROCARBONS SUCH AS VASELINE®, PETROLEUM JELLY, KEROSENE, BENZENE, GASOLINE, ETC., WILL DAMAGE PRODUCTS THAT CONTAIN O-RINGS OR PLASTIC COMPONENTS. EXPOSURE TO SUCH HYDROCARBONS MAY CAUSE THE PRODUCTS TO LEAK. DO NOT USE CLACK CONTROL VALVE PRODUCT(S) ON WATER SUPPLIES THAT CONTAIN HYDROCARBONS SUCH AS KEROSENE, BENZENE, GASOLINE, ETC.

Use Instructions:

- 1.Screw a Clack valve or in/out head on to an empty dome hole tank. If when tightened the inlet or outlet interferes with dome hole access replace the base o-ring (V3180) with the desired 60 degree or 120 degree shim.
- 2.Install the desired shim onto the base with the curved surface toward the base. **Do not use Vaseline, oils, other hydrocarbon lubricants or spray silicone.** A silicone lubricant may be used on black o-rings but is not necessary.
- 3.Thread the valve or in/out head onto the tank to check for proper alignment (see Figure 1 on the reverse side). Then remove, install distributor, desired medias and reinstall valve or in/out head.

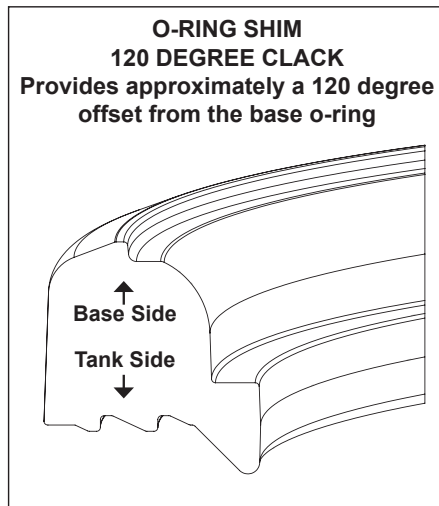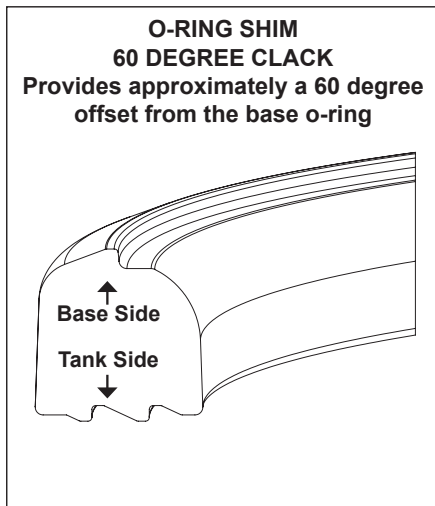

Order No.: V3799

 
 
Description: SHIMS CLACK VALVES&1191&1190FP

ONLY FOR USE ON CLACK CONTROL VALVES, CLACK 1191 IN OUT HEADS AND CLACK 1190FP IN OUT HEADS ON DOME HOLE TANKS WITH 2-1/2 -8 NPSM THREADS

HYDROCARBONS SUCH AS VASELINE®, PETROLEUM JELLY, KEROSENE, BENZENE, GASOLINE, ETC., WILL DAMAGE PRODUCTS THAT CONTAIN O-RINGS OR PLASTIC COMPONENTS. EXPOSURE TO SUCH HYDROCARBONS MAY CAUSE THE PRODUCTS TO LEAK. DO NOT USE CLACK CONTROL VALVE PRODUCT(S) ON WATER SUPPLIES THAT CONTAIN HYDROCARBONS SUCH AS KEROSENE, BENZENE, GASOLINE, ETC.

Use Instructions:

- 1.Screw a Clack valve or in/out head on to an empty dome hole tank. If when tightened the inlet or outlet interferes with dome hole access replace the base o-ring (V3180) with the desired 60 degree or 120 degree shim.
- 2.Install the desired shim onto the base with the curved surface toward the base. **Do not use Vaseline, oils, other hydrocarbon lubricants or spray silicone.** A silicone lubricant may be used on black o-rings but is not necessary.
- 3.Thread the valve or in/out head onto the tank to check for proper alignment (see Figure 1 on the reverse side). Then remove, install distributor, desired medias and reinstall valve or in/out head.

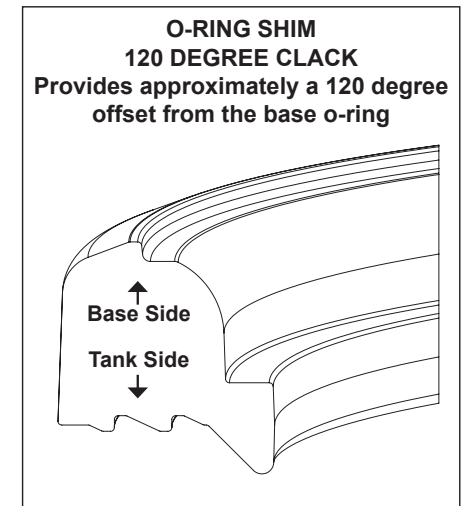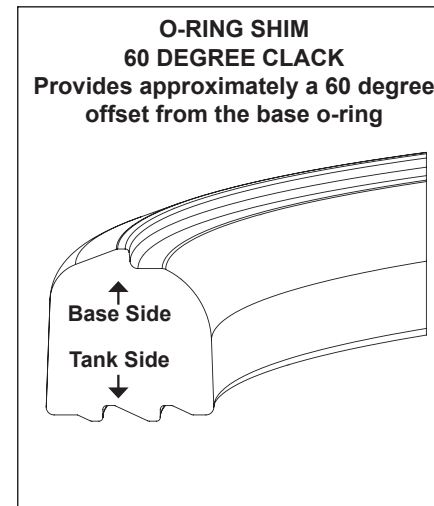


Order No.: V3799

Description: SHIMS CLACK VALVES&1191&1190FP

ONLY FOR USE ON CLACK CONTROL VALVES, CLACK 1191 IN OUT HEADS
AND CLACK 1190FP IN OUT HEADS ON DOME HOLE TANKS WITH 2-1/2 -8
NPSM THREADS

 Figure 1

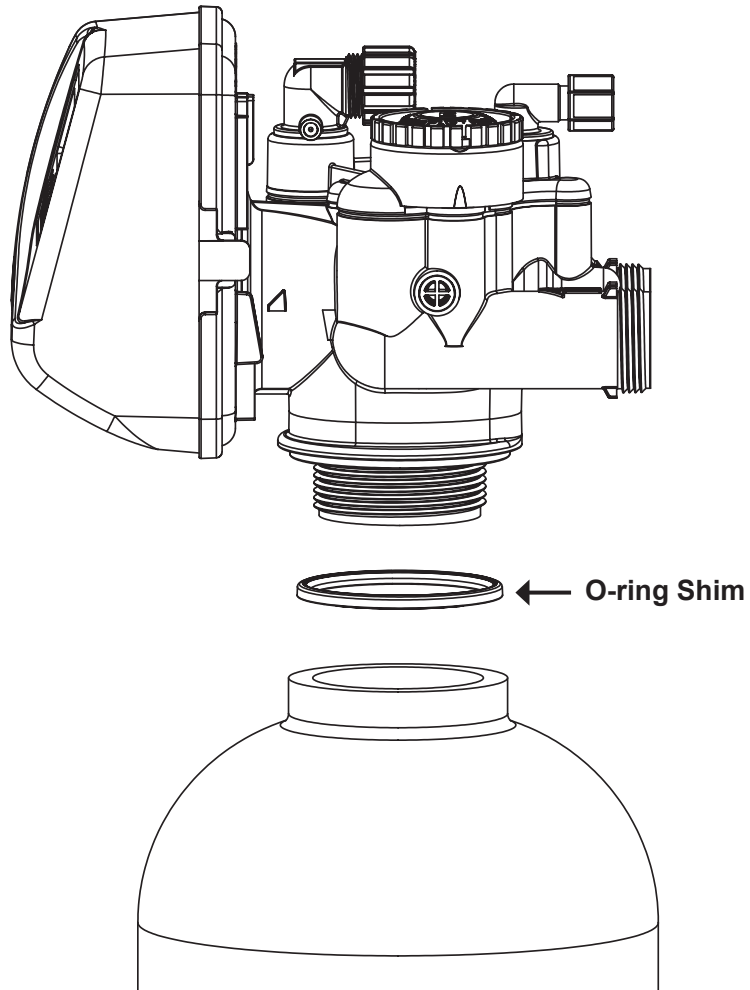

Order No.: V3799

Description: SHIMS CLACK VALVES&1191&1190FP

ONLY FOR USE ON CLACK CONTROL VALVES, CLACK 1191 IN OUT HEADS
AND CLACK 1190FP IN OUT HEADS ON DOME HOLE TANKS WITH 2-1/2 -8
NPSM THREADS

Figure 1

